



PREPsafe FOOD LABELS

- ✓ compliance made easy..
- ✓ improve productivity..
- ✓ accurate everytime..
- ✓ fast and easy to use..

Produce neat, clear and accurate food labels in seconds!



www.prepsafe.com

For all your food preparation recording needs, rely on.. *Preppy*™.

“Wall Mount ZD410” Installation Guide


1. Unwrap and check the contents, Select an installation location (*screen height 6 inches or 15cm below eye level will give best viewing angle*). Check for power cables and plumbing services **Before** drilling holes for the wall plugs.



2. Mark drilling points on the wall using the wall mount as a template.



3. Drill holes for the wall plugs. If installing on a tiled wall it is best to apply tape and drill a pilot hole first to prevent cracked tiles then install the supplied wall plugs.

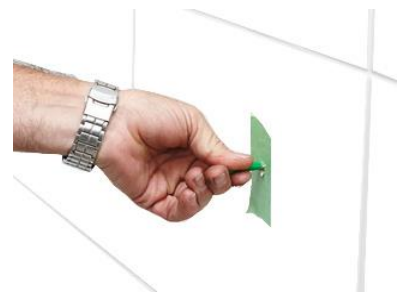

4. Place the wall mount over the base of the Printer and secure it with the two small supplied screws (4g x ¼ screws)



5. Insert the printer power pack cable and the 2 USB cables from the Preppy Console into the rear sockets on the printer and tie any loose cable out of the way



6. Affix the wall mounting plate and printer to the previously installed wall plugs and secure the bottom of the wall plate with supplied Velcro tape



- please read and understand the installation instructions before attempting installation
- only competent persons with proper tools should attempt installation of the Wall Mounting.
- Prepsafe Food labels takes no responsibility for any loss or damage caused by poor or incorrect installation

www.prepsafe.com